



AL400ULADA - NAC Power Extender

Rev. 010400

Installation Guide

Overview:

The Altronix AL400ULADA Fire Alarm Indicating Circuit Power Supply/Charger is specifically designed to interface between the FACP and indicating devices to supply the additional power needed for a Fire Alarm System to conform to ADA regulations. For both retrofit and new installations, the model AL400ULADA Fire Alarm Indicating Circuit Power Supply will save time and expense, while efficiently providing the power needed to drive additional horns, strobes and bells required under the ADA. This unit allows compatibility between 12VDC fire alarm control panels and 24VDC ADA strobes and other signaling devices. The AL400ULADA comes complete with power supply, enclosure, transformer and ample room for standby batteries. On-board supervisory relays are incorporated for remote status reporting and trouble indications at the fire panel.

Specifications:

Agency Listings:

- UL Listed Control Units and Accessories for Fire Alarm Systems (UL 864).
- MEA - NYC Department of Buildings Approved.
- CSFM - California State Fire Marshal Approved.
- NFPA 72 compliant.



Supervision:

- Signaling device loop supervision.
- AC fail supervision (form "C" contact).
- Battery presence and low battery supervision (form "C" contact).

Visual Indicators:

- AC input and DC output LED indicators.

Special Features:

- Unit is compatible with Class B indicating circuits.
- Compatible with 12 or 24VDC fire panels.
- Filtered and electronically regulated output.

Additional Features:

- Unit is complete with power supply, red enclosure, cam lock, battery leads and open frame transformer.
- Thermal and short circuit protection with auto reset.

Enclosure Dimensions:

15.5"H x 12"W x 4.5"D

Input:

- Input 115VAC 50/60 Hz, 1.45 amp.

Output:

- Class 2 Rated power limited outputs.
- 12VDC or 24VDC @ 4 amp supply current.

Battery Backup:

- Built-in charger for sealed lead acid or gel type batteries.
- Automatic switchover to stand-by battery when AC Fails.

Power Supply Output Specifications:

Output	Switch Position			Load DC
12VDC	SW1 & SW2 OFF	SW3 & SW4 ON	SW5 & SW6 CLOSED	4.0 amp
24VDC	SW1 & SW2 ON	SW3 & SW4 OFF	SW5 & SW6 OPEN	4.0 amp

Stand-by Specifications:

Stand-by Batteries	24 hr. of Stand-by & 15 mins. of Alarm	60 hr. of Stand-by & 15 mins. of Alarm
12V / 7 AH Battery	Stand-by = 60mA Alarm = 4.0 amp	Stand-by = 60mA Alarm = 4.0 amp
24V / 7 AH Battery (Two (2) 12VDC / 7 AH Batteries wired in series)	Stand-by = 60 mA Alarm = 4.0 amp	Stand-by = 60 mA Alarm = 4.0 amp

Note: Current draw from FACP is 5 mA in alarm condition.

Operation:

The AL400ULADA Fire Alarm Indicating Circuit Power Supply/Charger, is intended for use with fire alarm control panels (FACP) to provide the increased power necessary to operate the additional indicating devices due to the new ADA requirements. In a non-alarm condition, the FACP indicating circuit signal passes through the AL400ULADA, thus maintaining circuit supervision. In an alarm condition, the FACP indicating output voltage reverses polarity triggering the AL400ULADA. This causes the AL400ULADA to supply power to the indicating devices connected to its output. Multiple AL400ULADA units may be interconnected along this circuit to accommodate more indicating devices (Fig. 2, pg. 3).

Installation Instructions:

The AL400ULADA should be installed in accordance with article 760 of The National Electrical Code or NFPA 72 as well as all applicable Local Codes.

Refer to Terminal Identification Chart on page 4 for a description of each terminal function.

1. Mount AL400ULADA in desired location.
2. Connect the black and white transformer leads of AL400ULADA to a separate unswitched AC circuit (115VAC, 50/60Hz) dedicated to the Fire Alarm System (Fig. 1).
3. Set the AL400ULADA to the desired DC output voltage (factory set for 24VDC) by setting the switches to the appropriate positions (refer to Power Supply Output Specification Table, pg. 1).
4. Measure output voltage before connecting devices. This helps avoid potential damage.
5. Connect the indicating circuit output from the FACP (Fire Alarm Control Panel) (5 to 30VDC) to the terminals marked [- IN +] (Fig. 3, pg. 3) observing the correct polarity in alarm condition.
Note: Polarity indicated at the [- IN +] terminals are in alarm condition.
6. Connect the indicating devices to be powered by the AL400ULADA to the terminals marked [+ OUT --] (Fig. 2, pg. 3) and install the FACP's EOL resistor after the last indicating device on the circuit. The total current draw of the indicating devices should not exceed of 4 amp per power supply.
7. Connect supervisory trouble reporting devices to outputs marked [AC FAIL, LOW BAT] (Fig. 3, pg. 3) and [Power Fail] (Fig. 3, pg. 3) supervisory relay outputs. Use 22 AWG to 18 AWG for AC Fail & Low Battery reporting.
8. Connect the stand-by batteries to the terminals marked [-BAT +] (Fig. 3, pg. 3) carefully observing proper polarity. For 24VDC operation connect two (2) 12VDC batteries in series.

Notes:

- A. The AL400ULADA can be triggered by a 5VDC to 30VDC input from an FACP and provide a selectable 12VDC or 24VDC output (as set by appropriate switches, refer to Power Supply Output Specifications, pg. 1).
- B. The AL400ULADA is compatible with style Y (class B) indicating circuits only.

Maintenance:

The AL400ULADA should be tested at least once a year for proper operation as follows:

Output Voltage Test: Under normal load conditions, the DC output voltage should be checked for proper voltage levels (refer to Specification Table, pg 1) and adjusted if needed with on board trimpot for a few tenths of a volt variation.

Battery Test: Under normal load conditions check that the battery is fully charged. Check the voltage at the battery terminal and at the board terminal marked [-BAT +] to insure there is no break in the battery connection wires.

Note: Maximum charging current under discharge is 1.25 amp.

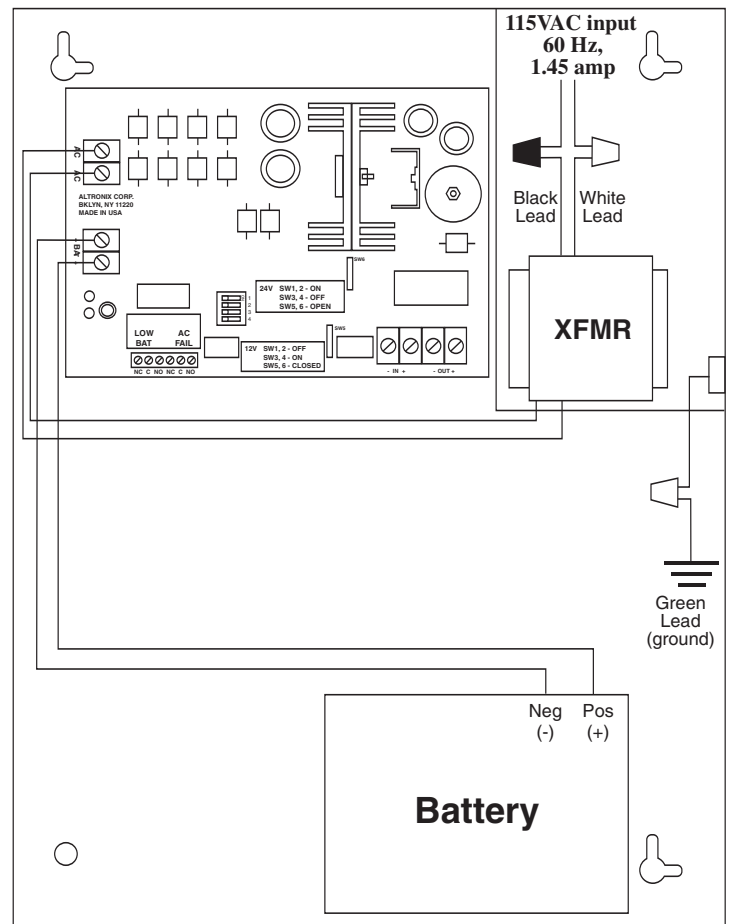


Fig. 1

Note: Expected battery life is approximately five years, however it is recommended changing batteries in four years or less if needed.

Note: With no AC present and battery wires connected, the DC output will read approximately 1 volt lower than the actual battery voltage.

Fuse:

Factory authorized battery fuse M318006, 250VA / 6 amp. If this is blown battery voltage will not appear on DC output terminals (refer to LED Diagnostic Table). Return unit for replacement of fuse.

LED Diagnostic Table:

Red (DC)	Green (AC)	Power Supply Status
ON	ON	Normal operating condition.
ON	OFF	Loss of AC, Stand-by battery supplying power.
OFF	ON	No DC output.
OFF	OFF	Loss of AC. Discharged or no stand-by battery. No DC output.

AL400ULADA: Typical Application Diagram:

Fig. 2


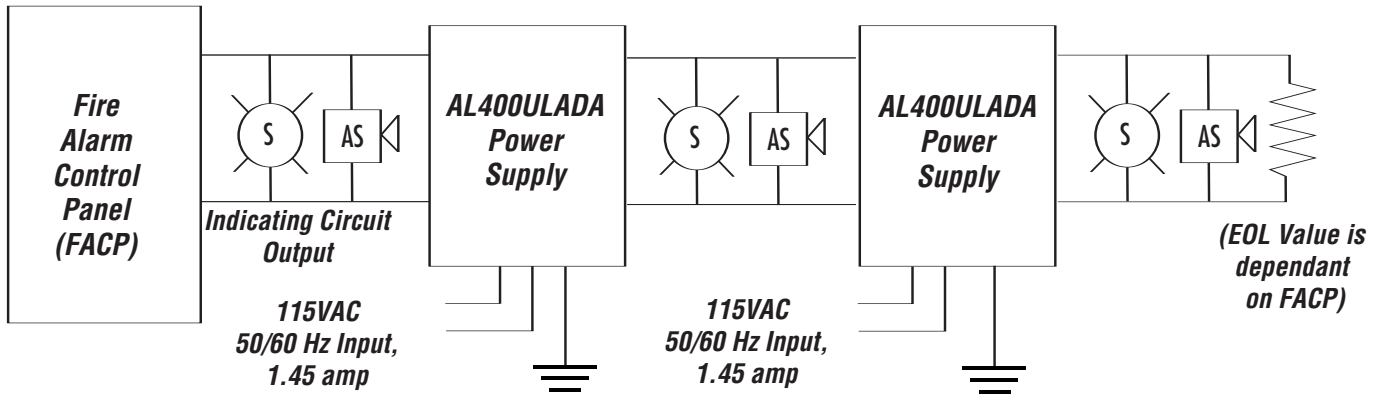


Fig. 3

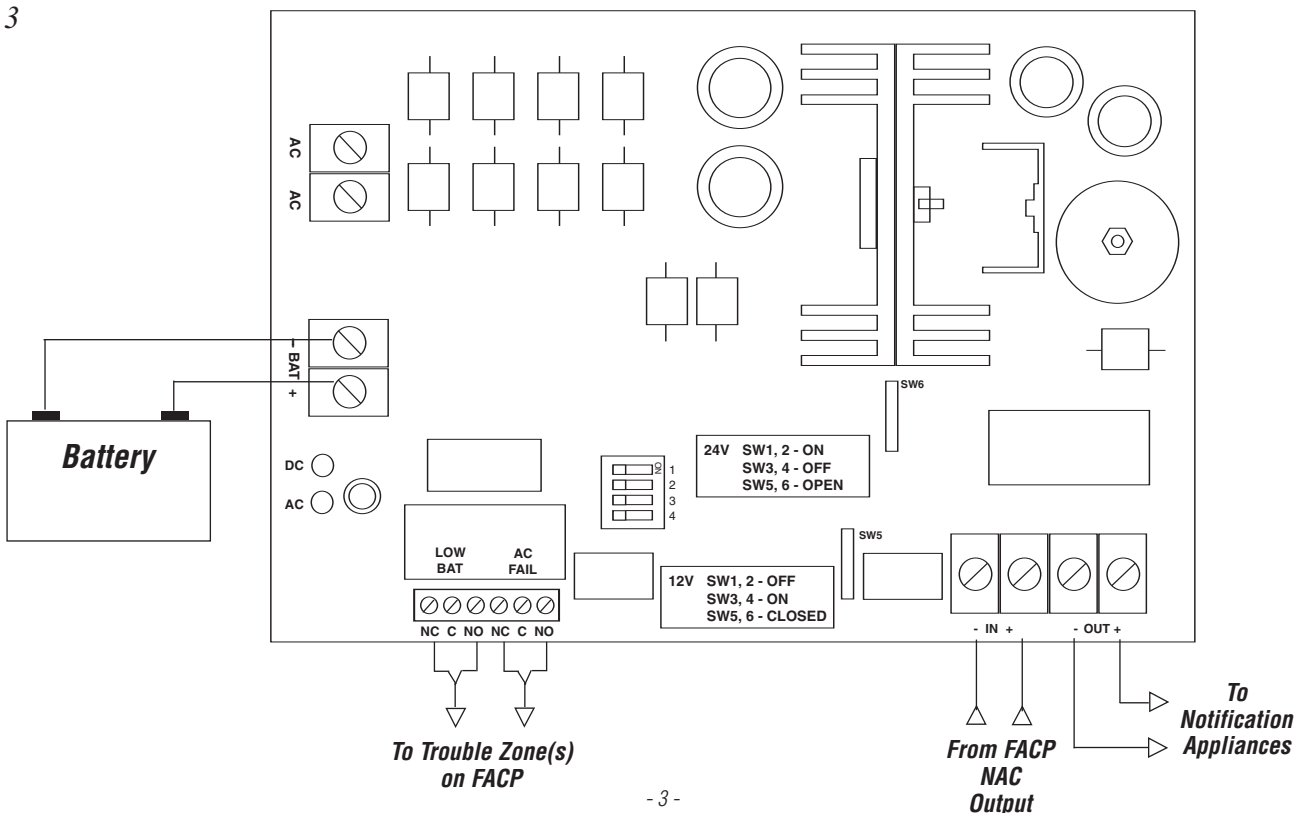


Terminal Identification:

Terminal Legend	Function/Description
- IN +	These terminals connect to the 12VDC or 24VDC FACP indicating circuit output. In a non-alarm condition the FACP supervisory signal is passed through to the + OUT - terminals (polarity is indicated for alarm condition).
+ OUT -	This is a 12VDC or 24VDC indicating circuit output. When triggered by the FACP (caused by polarity reversal on the input) it will provide it will provide 12VDC or 24VDC output to the signaling devices with the polarity as indicated. An EOL device supplied by the FACP manufacturer should be installed after last signaling device on this output loop.
AC FAIL N.O., C, N.C.	Form "C" dry contacts used to signal the loss of AC, with AC present terminals N.O. and C are open, N.C. and C are closed. When loss of AC occurs terminals N.O. and C close, N.C. and C are open.
LOW BAT N.C., C, N.O.	Form "C" dry contacts used to signal low battery voltage or loss of battery voltage. Under normal conditions, terminals N.O. and C are open, N.C. and C are closed in a trouble condition N.O. and C are closed, and N.C. and C are open.
-BAT +	Standby battery input (leads provided). Use two 12VDC batteries wired in series for 24VDC operation.

Enclosure Dimensions:

15.5"H x 12"W x 4.5"D

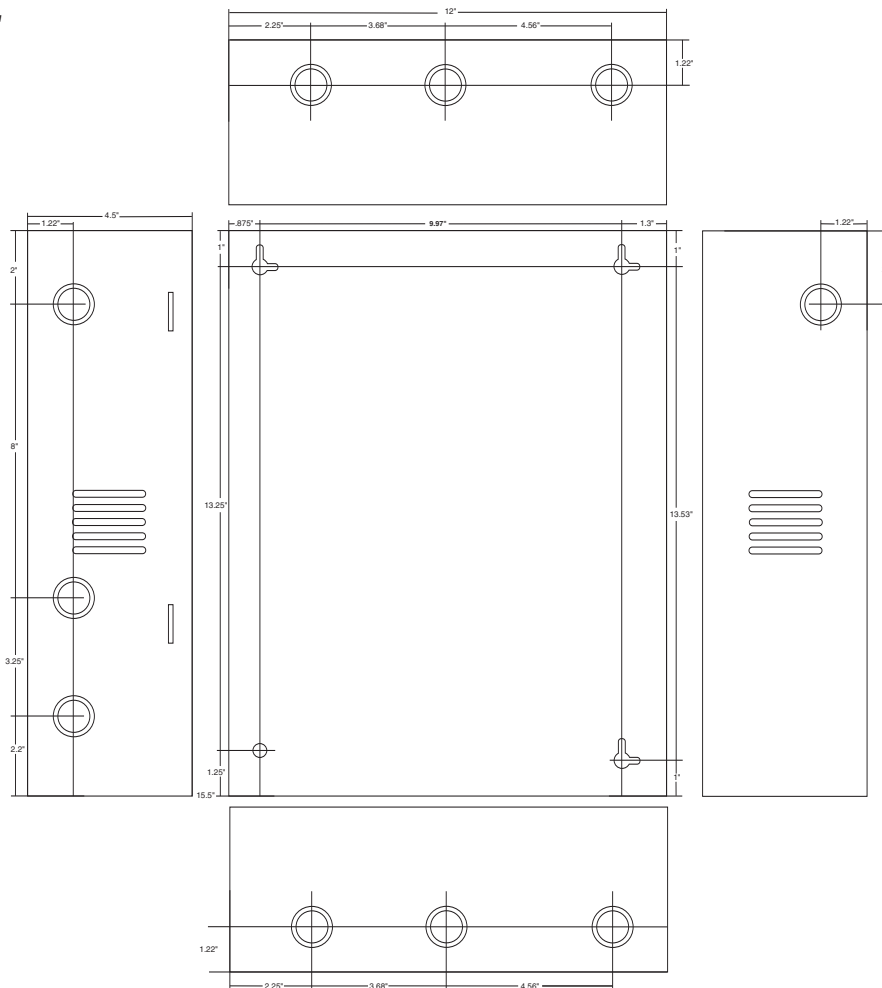

Altronix is not responsible for any typographical errors.

Altronix Corp.
 140 58th Street, Brooklyn, New York 11220 USA, 718-567-8181, fax: 718-567-9056
 web site: www.altronix.com, e-mail: info@altronix.com, Lifetime Warranty, Made in U.S.A.
 IIAL400ULADA - Rev. 010400 J27D

